


# COVER PLATES



Progressive's Cover Plates protect the S-Series CounterView or CVe Monitor from damage during mold transfers.

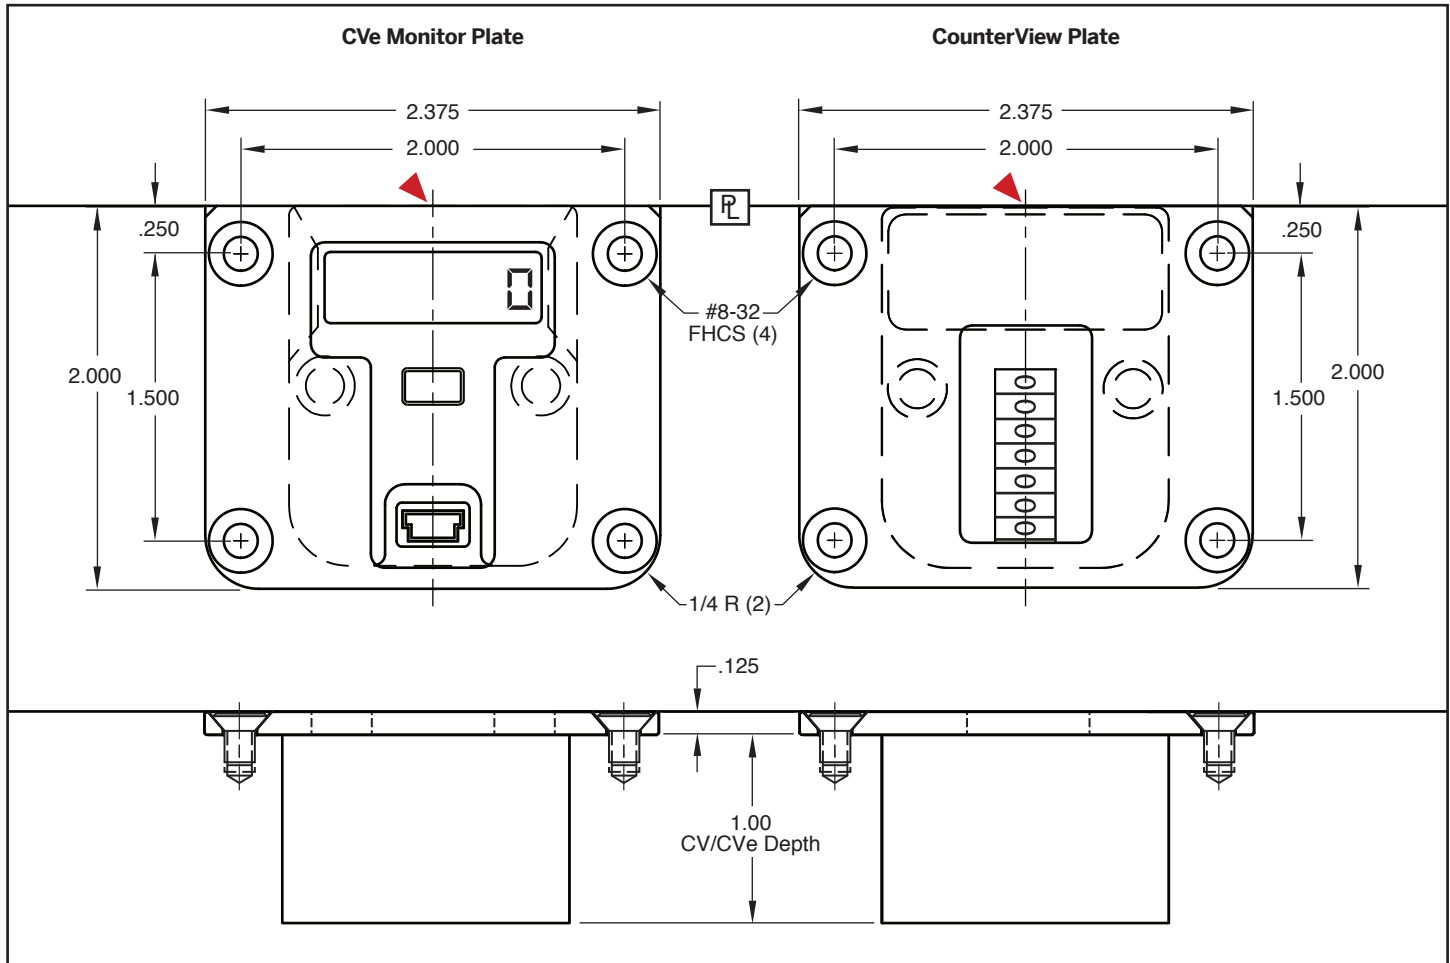

▶ CAD insertion point

**M** 1018 **H** 135 Brinell **S** Black Oxide

CATALOG NUMBER	DESCRIPTION
<b>CVE-PLT</b>	CVe Monitor Cover Plate with (4) #8-32 x .312 long FHCS
<b>CV-PLT</b>	CounterView Cover Plate with (4) #8-32 x .312 long FHCS

### Design Guidelines:

- Cover Plates can be used for both the A-Side and B-Side mounting options for the CounterViews sold separately on page F-8.
- CVe Monitors are sold separately on page F-1.
- The Cover Plates can be installed flush to the outside of the mold base by adjusting the depth of the pocket for the CVe Monitor or CounterView by the 1/8" thickness of the plate. If mounting on outside of the base, no pocket adjustment is needed.